



DATA SHEET:59

ATL Cowculator

Command Lines:

ATL Cowculator For Windows can be commanded to perform actions from arguments entered into the command line.

There are two main areas of control provided:

1. Cow Data manipulation through files.

a. To dump the Cow data store to file

Cowculator -dump [File Name] [-format]

[-format] this can be one of the following:

- win The native file format of ATL Cowculator
- dos The old style format
- csv A Comma Separated Values File
- xml An XML serialization file

2. Data transmission and reception to the ATL In Parlour and Out of Parlour Controls.

a. To upload to a system:

Cowculator -send [-to] [File Name] [-format]

[-to] this can be one of the following:

- ip For In Parlour
- oop For Out of Parlour

[-format] this can be one of the following:

- win The native file format of ATL Cowculator
- dos The old style format
- xml An XML serialization file

b. To download from a system

Cowculator -get [-from] [File Name] [-format]

[-from] this can be one of the following:

- ip For In Parlour
- oop For Out of Parlour
- oopatn For Out of Parlour Attention Lists

[-format] this can be one of the following:

- win The native file format of ATL Cowculator
- dos The old style format
- csv A Comma Separated Values File
- xml An XML serialization file